




QUICK START **m300**

Inserting SIM card and battery

- Open the lid on the back.
- Slip the SIM card into the designated fixture, with the golden chip facing downwards, as shown below.
- Slip the upper end of the battery into the fixture, with the marking - - + facing downwards.
- Press the lower end of the battery into the fixture.
- Put the lid back on.

Removing SIM card and battery

- Open the lid on the back.
- Remove the battery by pulling it on the lower edge.

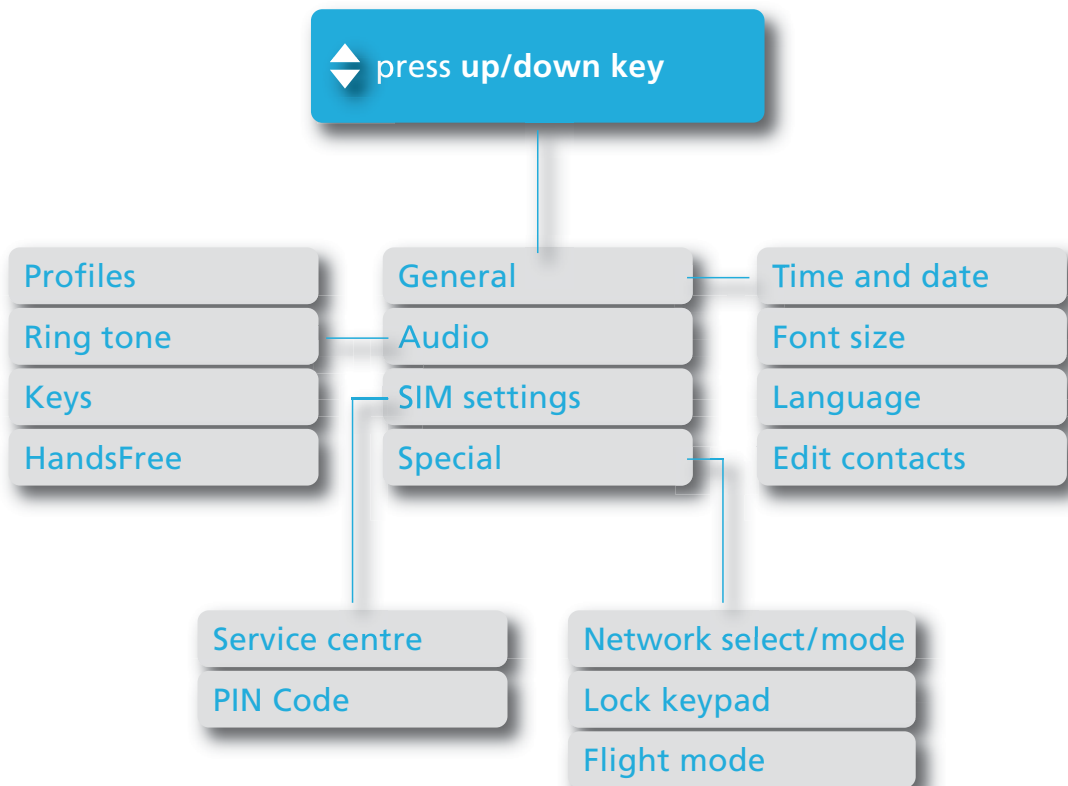

Phonebook

Adding a new contact:

- Press the multifunctional key LSK on the left to enter the menu "Add contact".
- Press the LSK key again to go to "Option" → "Create"
- Go to "Name" or "Number" with the up/down key and press "OK", then add the contact by using the keypad. Dial phone numbers with their area codes.
- Save with LSK key.

SMS

Writing text messages:

- Press the right multifunctional key RSK to enter the SMS menu.
- Go to "Write SMS" with the up/down key and confirm by "OK".
- Write your message with the keypad.
- Delete wrong entries by using the RSK key.
- Enter common special characters like full stop and comma by using key 1.
- For more special characters like question or exclamation mark, use the * key.
- Confirm your message with the LSK key.
- Confirm the entry of the number with "OK".
- Dial the receiver's number and send with the LSK key.

Emergency call key
Pressing this key for about 3 seconds automatically triggers an emergency call.

GPS reception

- GPS connection activated
- GPS connection deactivated

Reception quality

- High reception quality
- Medium reception quality
- Low reception quality

Phonebook

SMS menu

Multifunctional key LSK (left)

Call/OK key

Special characters

Lock keypad
Confirm with * LSK



New text message

Mute

Missed call

Battery level

- Battery fully charged
- Battery level ok
- Battery low

Settings

Choose different settings with the **up/down** key as described.
By pressing the **"OK"** key, you enter the respective submenus, which you may also enter with **"OK"** or exit with **"Exit"**.

Multifunctional key RSK (right)

The multifunctional keys lead you to the **phonebook (left, LSK)** and the **SMS menu (right, RSK)**. They also allow you to confirm or cancel various settings or functions.

On/off key / exit

Press this key to switch the device on or off (3 sec), to reject or end a call or to cancel an action.

Mute

Change characters

Choose between small and capital letters and numbers (Abc, ABC, abc, 123).

up/down key
This key allows you to navigate through the menu and to adjust the **volume** during a call.